



MassageTableRentals

MassageSupplier

*A NaperMed Company*

## Setup Guide

Congratulations on your purchase of the Stronglite Ergo Pro III™ portable massage chair. The following pages will guide you through the process of your massage chair.

### **Seated Support Chair**

### **Setup Instructions**



**STRONGLITE**  
ERGO MASSAGE CHAIRS AVAILABLE SINCE 1982

## Unpacking the Chair



1 Remove all items from the box: FacePillow and Deluxe Adjustable Platform. Lay the chair facing up.

## Releasing the Frame



2 Locate the elastic ball-lock under the faceplate. Pull the ball upward.



3 Release the ball-lock away from the faceplate, allowing the chair to be opened.

## Standing the Chair Up



4 Pull the chair up, onto the back legs.



5 Anchor your foot on a back leg (A), near the wheel, & pull the front legs all the way forward till the chair stands upright (B).

## Locking the Frame




6 At the front of the chair, locate the frame lock lever underneath the arm rest. Carefully press the lever down completely till it locks in place.

**IMPORTANT: This step prevents the metal frame from collapsing while in use.**

## Arm Rest Adjustment



8 Locate arm rest lock lever (A). Lift armrest upward (B).

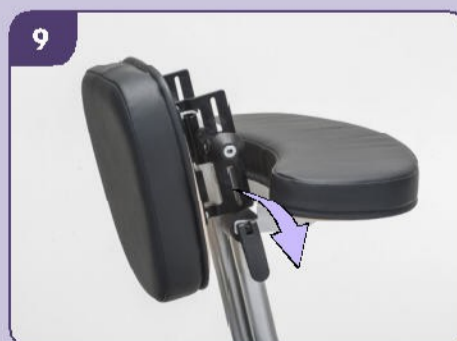

9 Fold lock lever over & down to secure arm rest.

## Chest Pad Adjustment



10 Locate chest pad lock lever (A). Make sure the lever is loose.

## Chest Pad Adjustment (cont'd)



Adjust chest pad to desired location **(B)**.



Fold lock lever over & down to secure chest pad.

## FacePillow & Platform Adjustment




Locate platform lock lever in 'open' position **(A)**. Fold down platform arms to desired location **(B)**. Fold lock lever down to secure arms in place **(C)**.

## FacePillow & Platform Adjustment



Place FacePillow onto platform **(A)**. Insert platform arms into inserts underneath the chest pad **(B)**. Fold lock lever over & down to secure platform **(C)**.

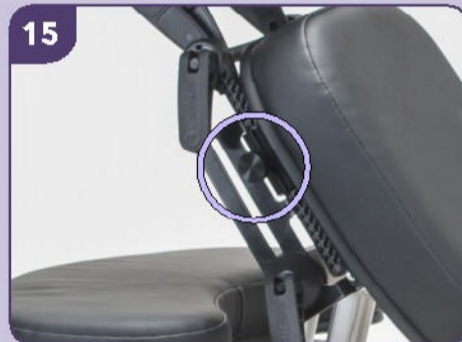

Use circular wheel tighteners for adjusting height level of the platform.

## Setup Complete



## ADDITIONAL FUNCTIONALITY

The following steps will help you customize the Ergo Pro II to fit all your clients.

## Seat Angle Adjustment



The seat pivots up from the back legs. Locate and press the round metal pin inward to release the seat.




Lift the seat up **(A)**. Pull the seat height lever down into the receiver slot **(B)**.




The receiver location allows the seat to be locked in two angles: high or low.

## Chair Height Adjustment - Back Legs

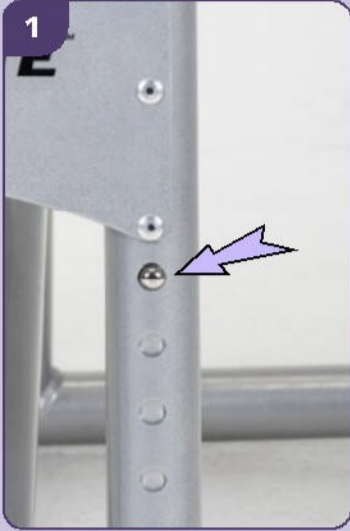

Locate the round metal pins next on each back leg under the face plate

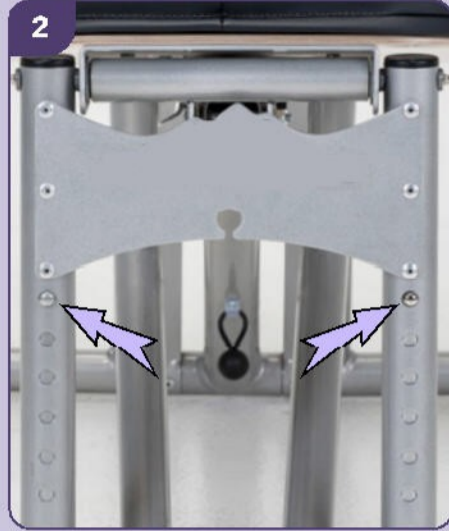

Press the round metal pins into the legs to allow for height adjustment



Adjust the legs to the desired height increment

## Removable Pads



Pads and cushions can be repositioned for optimal comfort on your seated support chair

## Removing the Knee Rests for Traditional Sitting Position



Locate the round metal pins next to each support guide on the knee rests. Press each pin down to loosen the knee rest



Slide the knee rest forward until the support guide is centered within the circular opening



Remove the leg supports to enjoy a more traditional seated position

## Re-Packing Carry Case



Lay the carry case down flat and open it. Fold the chair down and put into the carry case, wheels toward the holes in the bottom of the case



Zip the case with wheels down toward the floor.

Hold the top handle to carry and wheel the chair as needed

